

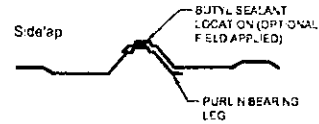
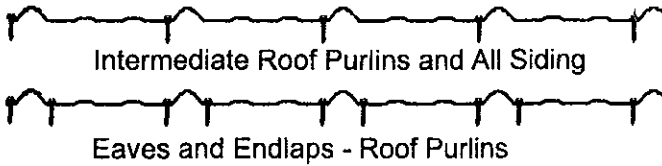


AFP METAL PRODUCTS RECOMMENDED FASTENER SCHEDULE FOR ROOFING & SIDING PANELS

Eco-Rib 5 & PBR Eco 4

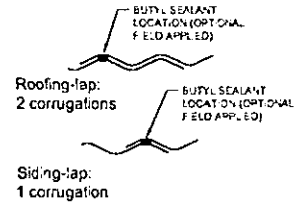

2¹/₂" Corrugated

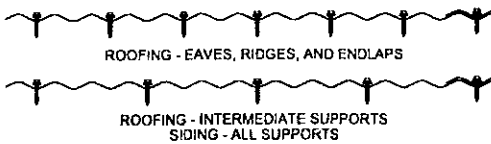

Eco-Lock Panel

Apply a modified truss head screw in the screw flange of the panel every 18-24 inches.

Apply 3 pcs. #9-10 fasteners spaced evenly in the field of the panel at the bottom eave edge of the roof.